

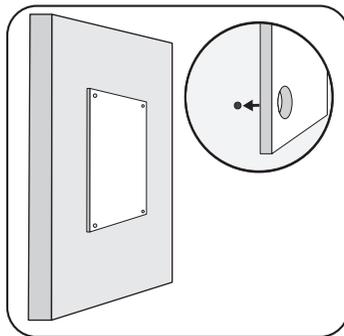



# ASSEMBLY INSTRUCTIONS

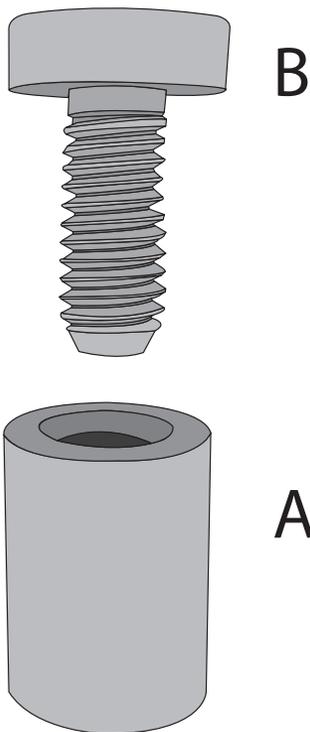

- 1 Use the panel holes as a template for positioning, and mark the holes on the wall.

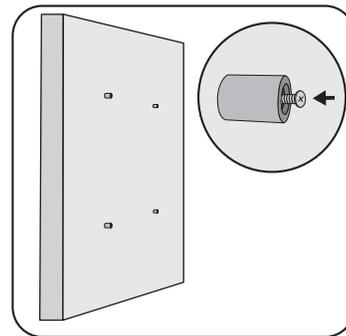

- 2 If the wall is drywall or plaster, install the relevant plugs in the wall in the center of the marked holes on the wall. Insert the flat head screw through Part A and tighten either into the plug or into the center of the hole marked on the wall (depending on the wall type).

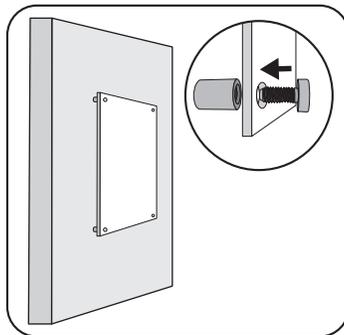

- 3 Line up the panel holes with the holes of Part A and screw Part B into Part A by hand until snug. NOTE: Overtightening could cause substrates such as acrylic to crack. Do not use tools for this step as they may damage the finish of Part B.