


UNITED INDUSTRIES

ULTRA BOARD™ ASSEMBLY INSTRUCTIONS

BARRIER INSTRUCTIONS

Included Pieces

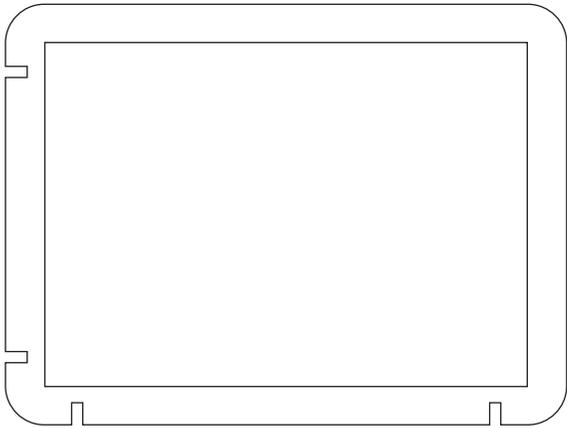


Frame



Horizontal Support





Vertical Support

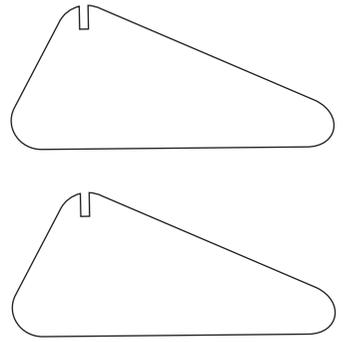

Base Feet

Assembly

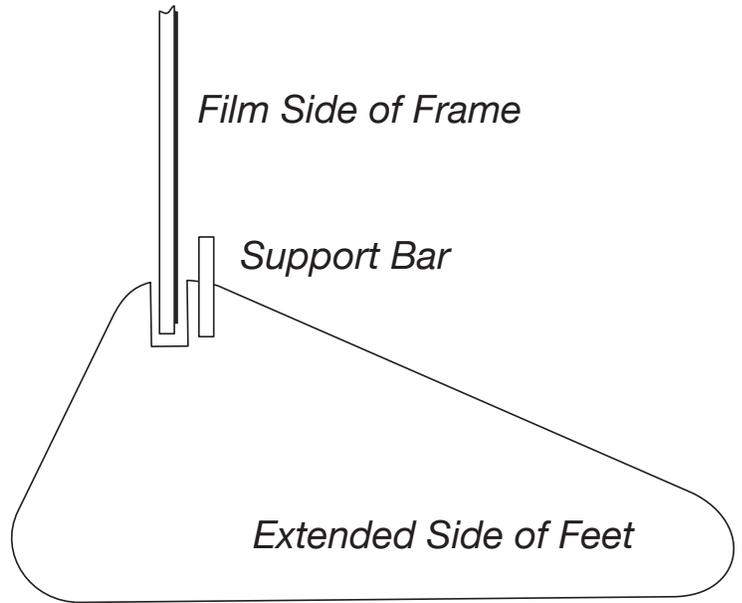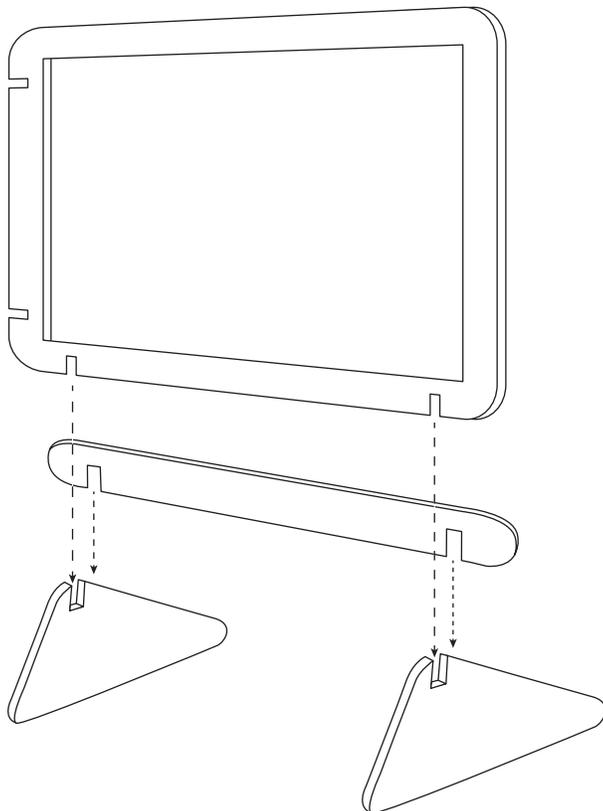

- 1** Place the Support Bar behind the feet slots on the extended side of the feet.
- 2** Insert the frame into the receiving slots of the base feet with the film side facing the support bar and the extended side of the base feet.