HanleyLED

Simplify Your Systems 0 1000 1000

Phoenix NRG Bar

NEW! SwiftConnect Watertight Wiring System cuts install time by 75%

So easy a kid can do it! No wire nuts, no wire strippers, no headaches! Eliminate mistakes with built-in Watertight T-Connector.

Game Saving Solution, made with High Efficiency Everything! 24 volt system for high output No additional bracing needed on long lengths

Can be cut to size Ideal for New Construction or HO Lamp Replacement Guaranteed life over 50,000 hours

HanleyPRO Layout Creator at hanleyledsolutions.com

LM79 LM80













GENERAL PURPOSE **RETROFIT SIGN** CONVERSION

FOR USE ONLY IN CERTIFIED ACCORDANCE WITH KIT INSTRUCTIONS e487794

KIT IS COMPLETE ONLY WHEN ALL PARTS REQUIRED BY THE INSTRUCTIONS ARE PRESENT

7/08/2022

Hanley<u>LED</u>

BEFORE YOU BEGIN

Determine your light bar mounting method. Are you using pre-existing sockets to mount? If so, Retrofit Connectors are already attached to the PhoenixNRG Bars. For a new construction, simply remove screw and cap or use in conjunction with optional mounting bracket.




- Retrofit (RF) Connector is already screwed onto ends
- Simply remove screw and cap for new construction signs or use in conjunction with optional mounting bracket
- PhoenixNRG Bars come with a water tight SwiftConnect for faster installation



24V Power Supply (sold separately)

Packaging:

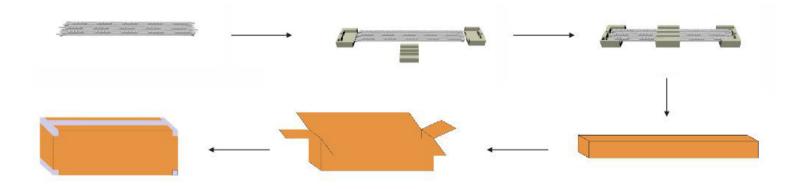

Item	Bars per box	Bars per case
HPEB-2S24	3	12
HPEB-2S30	3	12
HPEB-2S36	3	12
HPEB-2S42	3	12
HPEB-2S48	3	12
HPEB-2S60	2	8
HPEB-2S64	2	8
HPEB-2S72	2	8
HPEB-2S84	2	8
HPEB-2S96	2	8
HPEB-2S108	2	8
HPEB-2S117	2	8
HPEB-2S120	2	8

NOTE: All materials removed must be disposed of in accordance with applicable local, state, and federal laws.

WARNING Check Polarity: All connections must be WHITE-TO-RED (+) and

BLACK-TO-BLACK (-). Reverse polarity connections may damage the LEDs and will void product warranty.

Caution: Turn off power to sign before inspecting or removing existing light source. Power must remain off while installing the Concorde Cabinet System.

RETROFIT INSTALLATION GUIDE

PhoenixNRG Bar

This guide is designed to aid in the installation of HanleyLED's PhoenixNRG Bar. Skilled trades people that are familiar with general construction, electrical, and sign installation techniques should do the installation. Licensed electricians should provide all installation and hook-up of both the primary and secondary input/outputs of the HanleyLED power supply. All installation and hook-up should be done in accordance with all National and Local codes and permits. In no way is this document intended to construe warranty or fitness of use of the products described, nor is it intended to provide safety instruction for those installing the product.

THE FIELD INSTALLATION OF THIS RETROFIT SYSTEM INTO A SIGN IS SUBJECT TO THE ACCEPTANCE OF LOCAL INSPECTION AUTHORITY.

CAUTION: TURN OFF POWER TO THE SIGN BEFORE INSPECTING OR REMOVING EXISTING LIGHT SOURCE. THE POWER MUST REMAIN OFF WHILE INSTALLING THE LED RETROFIT KIT.

Tools Required:

- Wire cutter & strippers
- Marking pens

Drill

- Measuring tape
- Standard hardware and supplies in addition to the HanleyLED modules installation guides (UL listing may be required on certain items).

Prepping the Channel Letter or Cabinet

Step 1

Remove existing neon or fluorescent bulbs by having a licensed electrician disconnect and remove the neon transformers or fluorescent ballasts. Remove existing neon and standoffs or fluorescent lamps. Leave fluorescent sockets in cabinets with leads disconnected. This should leave an empty channel letter or cabinet.

ALL MATERIALS REMOVED MUST BE DISPOSED OF IN ACCORDANCE WITH APPLICABLE LOCAL, STATE AND FEDERAL LAWS.

Step 2

Using a non-oil based cleaner, clean the back surfaces of the channel letter or cabinet where the LED modules will be mounted. This is an important step for good adhesion of HanleyLED modules mounting tape.


Step 3

Installer should examine all parts that are not intended to be replaced by the retrofit kit for damage and replace any damaged parts prior to installation of the retrofit kit. Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation. Any existing holes in the letters or cabinet that will not be used in the installation of HanleyLED modules should be patched to avoid water damage. Opening smaller than ½" diameter may be sealed with the appropriate amount of rated caulk or sealant. Openings larger than ½" should be patched using an aluminum or zinc coated steel patch with rivets and sealant.

Step 4

Proceed with the appropriate HanleyLED module installation guide for your specific product.

PHOENIXNRG BAR DIMENSIONS

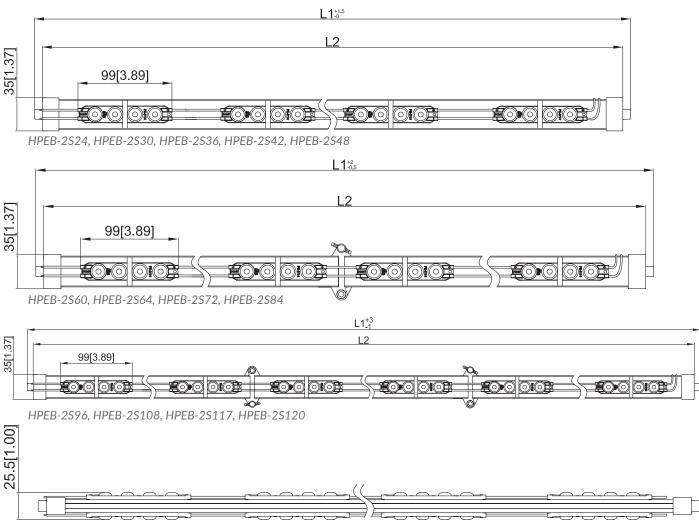

ALL PHOENIXNRG BAR SIZES

Your PhoenixNRG Bar is ready to go out of the package. Simply open the hinge and snap your bar into existing lamp sockets for retrofits, or screw directly into existing structure for new installs. NO PEELING AND STICKING OF MODULES REQUIRED!


Item	LED Lamp Cross Reference	Module QTY Per Bar	Watts (w)	Lumens (Im)	Actual Size (in)
HPEB-2S24	F24HO	6	6.6	1122	21"
HPEB-2S30	F30HO	8	8.8	1496	27"
HPEB-2S36	F36HO	10	11	1870	33.1"
HPEB-2S42	F42HO	12	13	2210	39.1"
HPEB-2S48	F48HO	14	15	2550	45"
HPEB-2S60	F60HO	18	20	3400	57"
HPEB-2S64	F64HO	20	22	3740	61.1"
HPEB-2S72	F72HO	22	24	4080	69"
HPEB-2S84	F84HO	26	29	4930	81"
HPEB-2S96	F96HO	30	33	5610	93"
HPEB-2S108	F108HO	34	37	6290	105"
HPEB-2S117	F117HO	36	40	6800	114"
HPEB-2S120	F120HO	38	42	7140	117"

LAYOUT GUIDELINES

Double-sided light box depth (in)	Item	Maximum space between bars (in)	Comments
6-8"	PhoenixNRG Bars by HanleyLED	9"	
9-11"		12"	Lightbox size: 47" x 67"
12-15"		15"	Tested with 3/16"
16-19"		20"	7328 white acrylic
20-30"		22"	

POWER SUPPLY LOAD CHART & CASCADING (PHOENIXNRG BARS IN A SERIES) INFOMRATION GUIDELINES


ltem		Power Supplies (24v)			Cascading/Run Information		
		60w H60W-PPS524V H60W-PPSEM24V	96w H96W-SD-24	100w H100W-PPS524V H100W-PPSEM24V	150w H150W-PPS524V H150W-PPSEM24V	240w H240W-PPS524V	Max Series Wired
			Max Number	of PhoenixNRG Bars p	er Power Supply		
HPEB-2S24 (F24HO)	6.6w	9	14	15	22	36	N/A
HPEB-2S30 (F30HO)	8.8w	6	10	11	16	24	N/A
HPEB-2S36 (F36HO)	11w	5	8	9	12	20	N/A
HPEB-2S42 (F42HO)	13w	4	7	7	10	16	N/A
HPEB-2S48 (F48HO)	15w	4	6	6	10	16	N/A
HPEB-2S60 (F60HO)	20w	3	4	5	6	12	N/A
HPEB-2S64 (F64HO)	22w	2	4	4	6	8	N/A
HPEB-2S72 (F72HO)	24w	2	4	4	6	8	N/A
HPEB-2S84 (F84HO)	29w	2	3	3	4	8	N/A
HPEB-2S96 (F96HO)	33w	1	2	3	4	4	N/A
HPEB-2S108 (F108HO)	37w	1	2	2	4	4	N/A
HPEB-2S117 (F117HO)	40w	1	2	2	2	4	N/A
HPEB-2S120 (F120HO)	42w	1	2	2	2	4	N/A

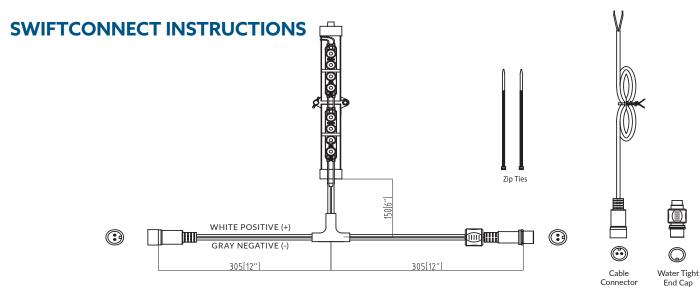



Hanley<u>LED</u>

SWIFTCONNECT INSTRUCTIONS

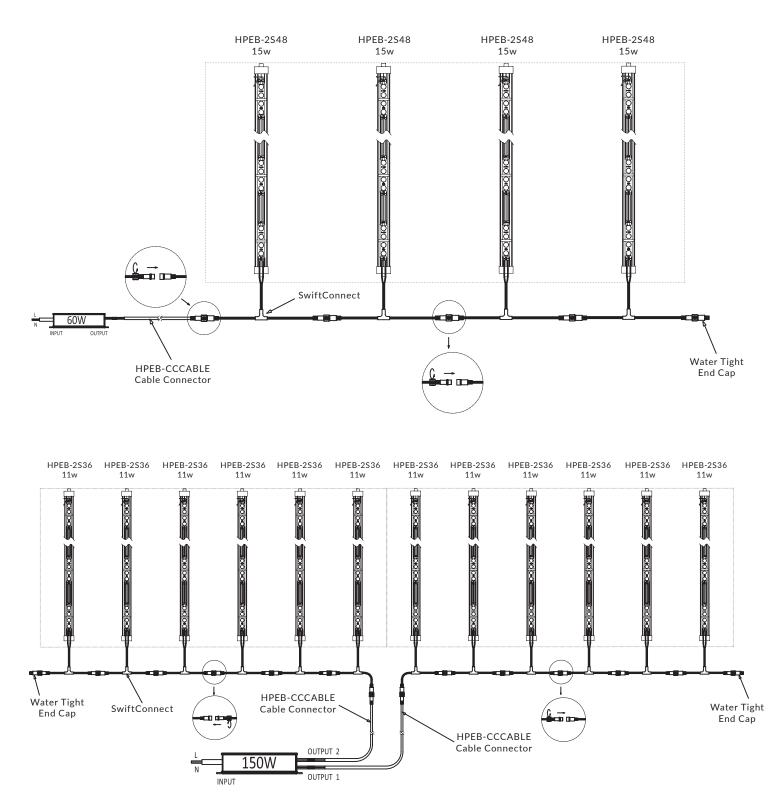

⁽¹⁾ HPEB-CCCABLE per output is needed on each power supply when using the SwiftConnect System.

WARRANTY

Model No.	Warranty Period
HPEB-2S24, HPEB-2S30, HPEB-2S36, HPEB-2S42, HPEB-2S48, HPEB-2S60, HPEB-2S64, HPEB-2S72, HPEB-2S84, HPEB-2S96, HPEB-2S108, HPEB-2S117, HPEB-2S120	10 year (product), 5 year (labor)

*Above warranty period is only for products which are used inside of waterproof light boxes and valid only when used as a system with HanleyLED Premium Power Supplies.

CAUTIONS

Cautions for installation and use:

- Make sure the installing surface is clean and suitable for sticking prior to installation.
- Inadequately connecting the '+' and '-' of module to those of power supply output might ruin your product.
- Full attention should be paid to wire polarity when connecting two or more strings of the product during installation.
- The maximum cascade length is 142 in (3600 mm); not recommended to exceed this cascading length.
- Standard operating temperature: -40° to 60°C.

Cautions for selection of other parts:

- Please ensure that the output voltage of using power supply is DC (24<u>+</u>5%)V, and the rated power supply is recommended to underload by 20%. (HanleyLED "PPS5" and "PPSEM" Power Supplies can be loaded to 100% if absolutely needed with no effect to warranty).
- During installation, please ask qualified person to count and select the suitable cable according to the diameter and length of wire when the connecting cable needs to be extended, otherwise, low input voltage to product may occur, or fire hazard due to overheated cable.
- Prohibited to use any acid or alkaline glue to fix this product.

TROUBLESHOOTING

Malfunctions	Possible Causes	Solutions
	The power supply did not connect to power grid	Power on
All LEDs do not work	No electricity due to short-circuit of external power supply.	Remove the malfunction caused by short-circuit, power on again
	The wires of the bar connect to power supply output reversely	Check the connection and ensure the wires are connected correctly
Part of LEDs do not work	Part of power supplies do not have output	
	Part of the bar wires have malfunction	Check the power supply system

TROUBLESHOOTING CONTINUED

Malfunctions	Possible Causes	Solutions
	Overloaded power supply	Replace it with higher power supply
Brightness of LEDs is weak or uneven	The power loss of power circuit is huge or the power loss to each existing circuit	Ensure working voltage of bars is within \pm 5%V of rated voltage (1. Shorten the length of wires between the first bar and power supply or replace with wires with bigger diameter; 2. Ensure the cascading quantity of string is less than or equal to the allowed maximum cascading quantity, and each bar cascading quantity is well-balanced)
	Too many bars in series/cascade	Lessen the cascading quantity for bar and ensure the quantity for each electrical circuit is within the maximum cascading quantity
LEDs are blinking	Poor wiring connections	Check all wiring connections immediately
	Failures in power supply	Replace power supply

WARNING – Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of sign electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.

WARNING – Risk of fire or electric shock. Install this kit only in host signs that have been identified in the installation instructions and where the input rating of the retrofit kit does not exceed the input rating of the sign

WARNING – Risk of fire or electric shock. Installation of this LED retrofit kit may involve drilling or punching of holes into the structure of the sign. Check for enclosed wiring and components to avoid damage to wiring and electrical parts.

WARNING - To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation. Only those open holes indicated in the photographs and/or drawings may be made or altered as a result of kit installation. Repair and seal any unused openings in the electrical enclosure. Openings greater than 12.7 mm (1/2 in.) diameter require a metal patch secured by screws or rivets and caulked with non-hardening caulk. Smaller openings may be sealed with non-hardening caulk.

PhoenixNRG Bar with SwiftConnect Watertight Wiring System

Reduce install time and install errors with our new SwiftConnect Watertight Wiring System. Not only does our 24 volt PhoenixNRG system reduce power supplies, it makes installing them faster and problem-free!

PhoenixNRG Bar with SwiftConnect Watertight Wiring System